

FlowGuard II ® Kit Installation

American AVK Company an ISO 9001-2000 registered company

WARNING: For all of the following repair procedures, the hydrant must be isolated or the system depressurized and drained before removing the hydrant components. Failure to do so may cause pressure to be released resulting in severe injury or death.

- 1. Turn the Body (F128) up-side-down and set it down. The cast-in flow arrow should be pointing toward the Hard stable surface. Place the Ball (F132), into the Body.
- Install the 8mm thick Seat Ring O-ring (F144), (the thickest of the three o-rings in the kit) onto the stainless steel Lower Seat Ring (F130), and grease the o-ring with a food grade grease.
- 3. Place the Lower Seat Ring into the body and press into place. Ensure that the O-ring remains in it's proper location.
- 4. Use food grade grease to stick the Lower O-ring (F145), in the groove between the Body and the Lower Seat Ring.
- 5. Carefully turn the assembly over and place it on the mounting flange of the riser pipe and attach loosely with mounting hardware. The bolts should be installed from the bottom so that with the nuts are on top of the check valve flange.
- 6. Place the Upper Retaining Cage (F129) into the top of the assembly and install the Upper O-ring (F143) into the groove created between the Body and Upper Retaining Cage.
- 7. Carefully mount the Wet barrel assembly onto the FlowGuard II assembly with the Breakable Flange (F124) and mount with the mounting hardware as shown in Fig. 2 and Fig. 3.
- 8. Carefully rotate the Wet barrel to the desired position. Do not dislodge the Upper O-ring, and tighten all mounting hardware to 60 Ft. Lbs. .

Included in Kit-F30 Mounting Bolt Qty. 12 F31 Mounting Washer 24 Qty. Mounting Nut Qty. 12 F34 F124 **Breakable Flange** Qty. 1 pair F128 Body Qty. 1 Upper Retainer Cage F129 Qty. 1 F130 Lower Seat Ring Qty. 1 F132 FlowGuard II ® Ball Qty. 1 F143 Upper O-ring Qty. 1 F144 Seat Ring O-ring Qty. 1 F145 Lower O-ring Qty. 1

